



INSTALLATION INSTRUCTIONS

<u>Product</u> 7160-1676-XX GETAC ZX-10 TABLET CRADLE	<u>Revision</u> Rev A	<u>Form</u> INST-1087 Printing Spec: PS-001
--	---------------------------------	---

This instruction sheet is for the Getac ZX-10 cradle only. For instructions on features, set-up, and operation of the Getac ZX-10 computer, please refer to the manual provided by Getac with the computer.

This cradle is designed to be used with a variety of Gamber-Johnson mounting systems. Installation instructions for other Gamber-Johnson products are provided with each individual product.

This instruction sheet is for the following products:

Item No. 7160-1676-00 Non-RF

Item No. 7160-1676-03 Tri-RF





Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2022 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

ZX-10 CRADLE FEATURE IDENTIFICATION

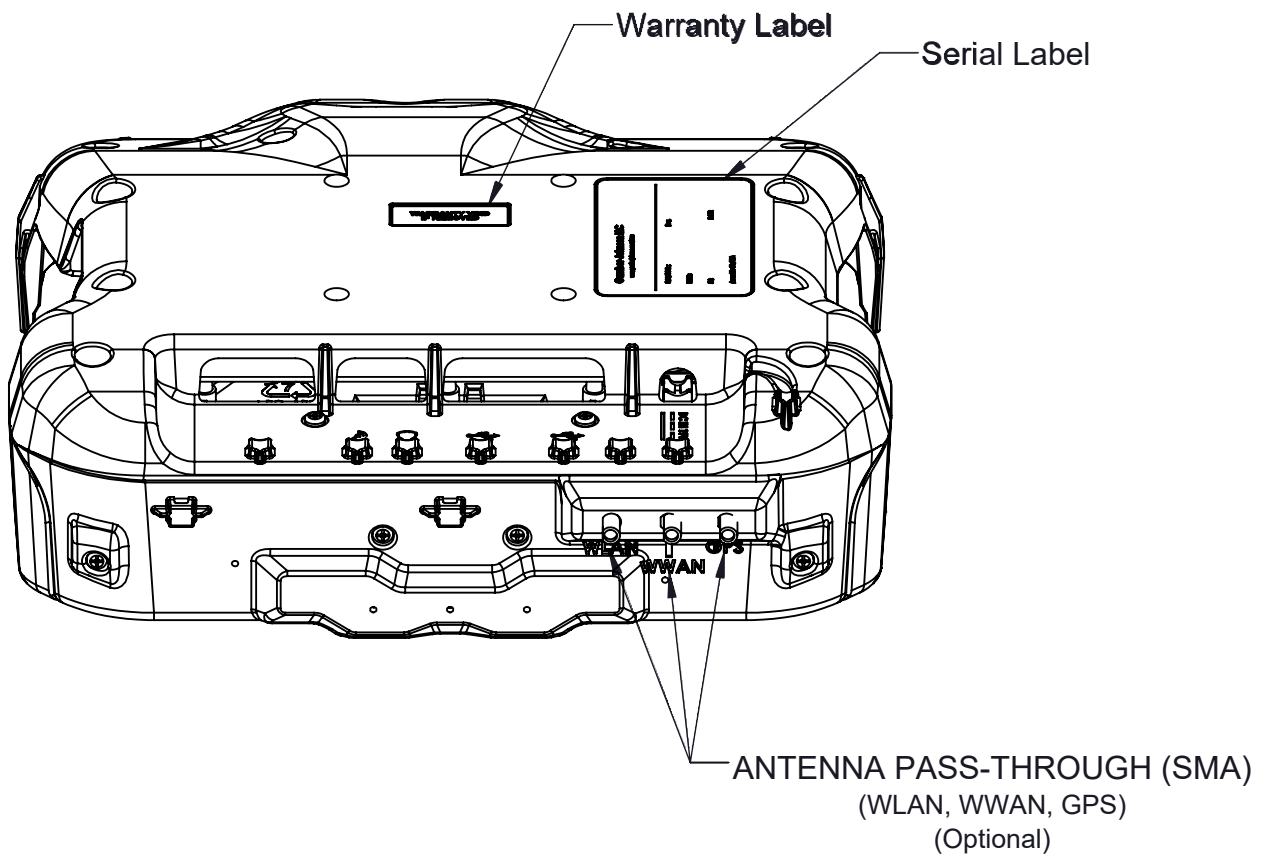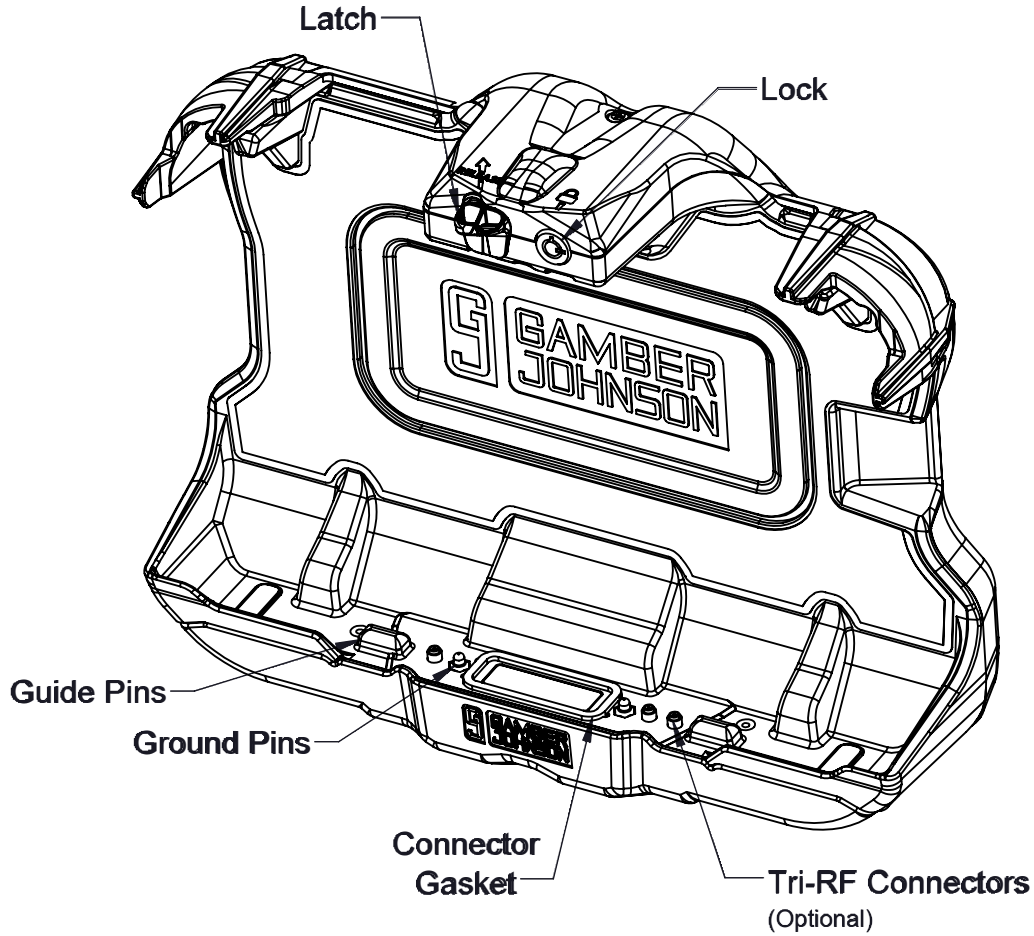

DOCKING AND UNDOCKING THE TABLET

1. Insert the bottom of the tablet into the cradle.
2. Rotate the top of the tablet under the top latch until the tablet is resting inside the main housing. The latch will spring down in front of the tablet to hold it in place.
(See figures 1, 2, & 3)
3. (Optional) The key lock can now be used for security purposes.

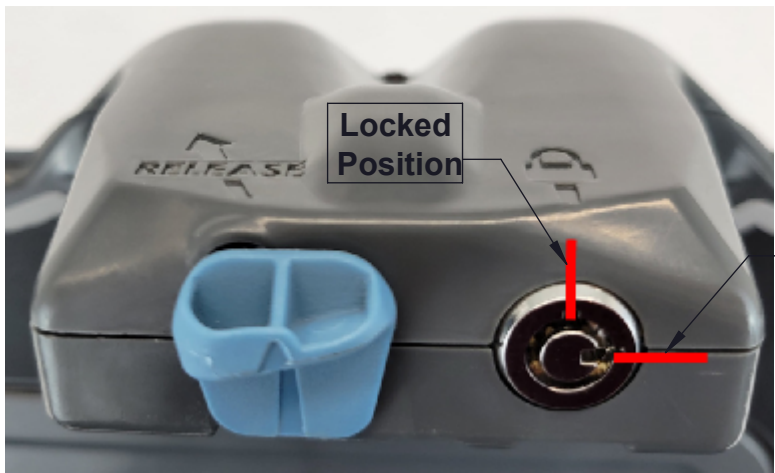


Figure 1



Figure 2



Figure 3



Figure 4



TO UNDOCK THE COMPUTER

1. Unlock the dock if locked.
2. Push upward on the thumb knob and pull outward on the top of the tablet until it clears the top latch. Lift the tablet out of the dock. Make sure handle clears the lock housing.
(See Figure 4)
3. Lift the Tablet up and out of the cradle.